




Step 1: Drill holes according to the position of Aluminum Channel, then put the screws (M8x100mm or M8x120mm)  
 Attn: Distinguish the direction of Aluminum Channel, the fixed side is outside and the movable side is inside

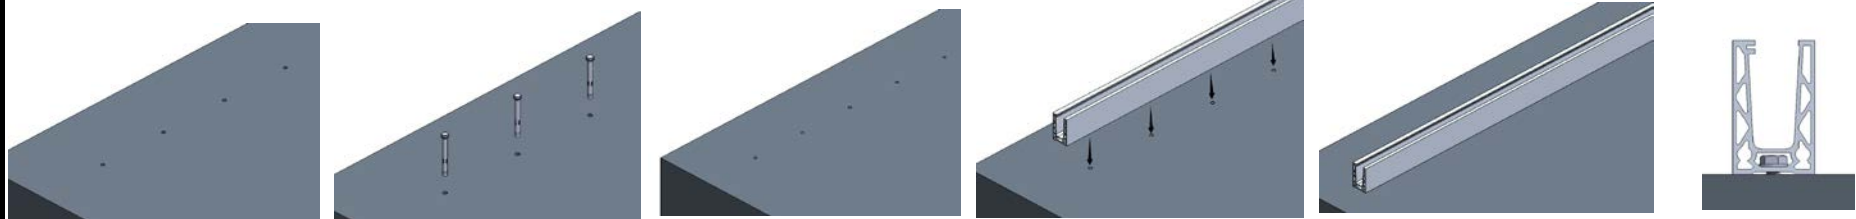


Step 2: Fix the Aluminum Channel on the ground

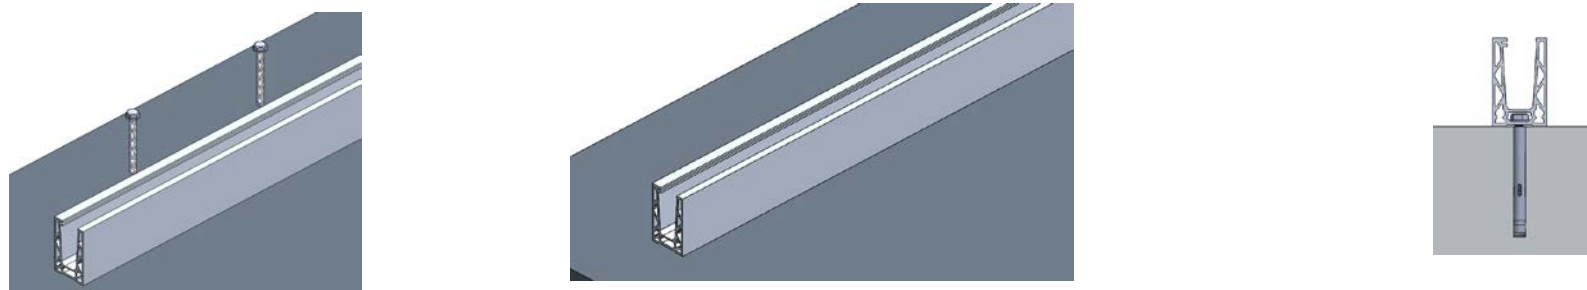


Step 3: Insert the Wedge & Rubber set for the fixed side

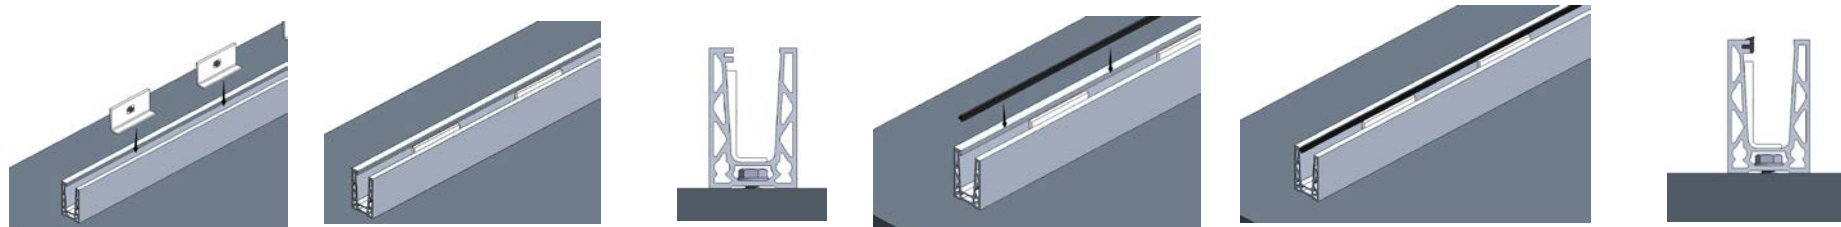


Step 4: Put the Glass into Aluminum Channel

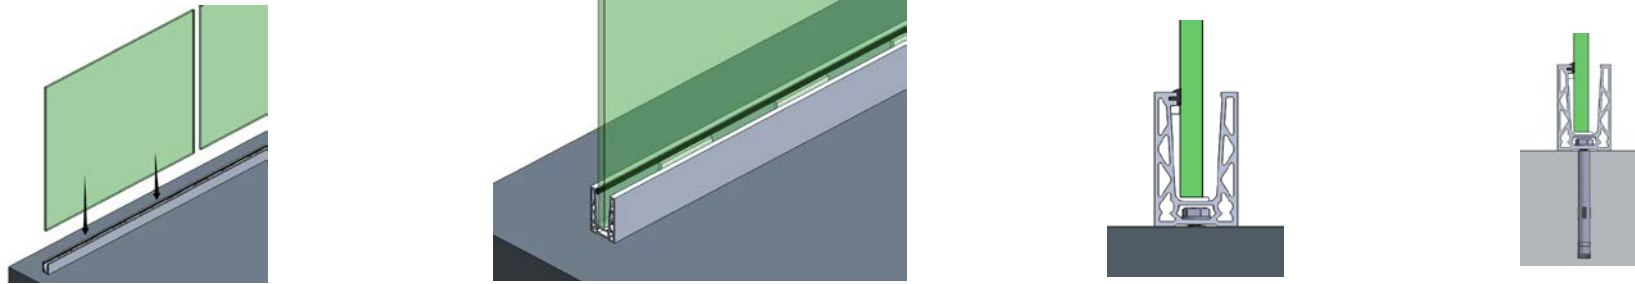

Step 5: Insert the movable side wedge tightly, and fixing the glass

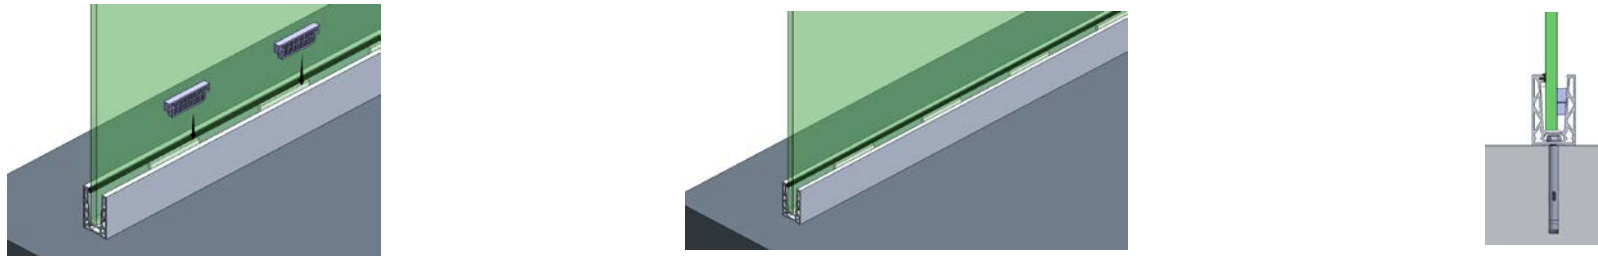

Step 6: Put into the Rubber set of movable side

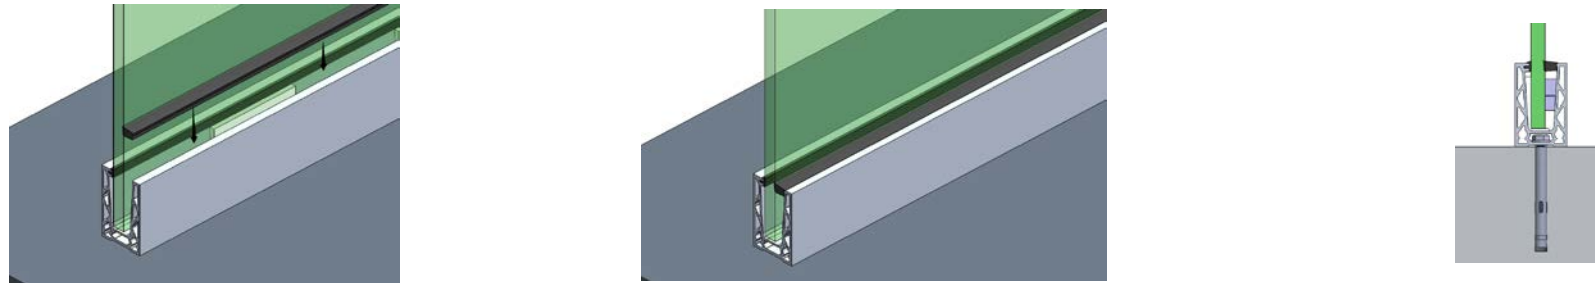

Step 7: The installation is done (overall installation effect)



**JINFER** QINGDAO JINFER INTERNATIONAL CO.,LTD.

Add: No.6th Shandong Road, Qingdao China 266000

Tel: +86 532 8386 0958

Email: sales@jinferrailing.com

[www.jinferrailing.com](http://www.jinferrailing.com)